 


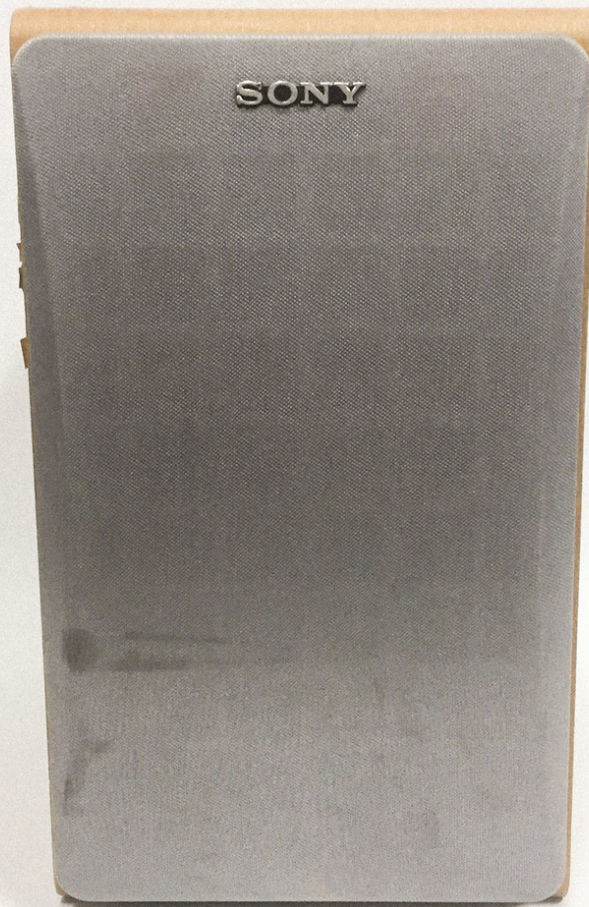

# Sony SS-CCP1 Screen Replacement

Removing front protective screen to gain access to speaker retaining screws. "Prerequisite Only"

 
Written By: Dallas



## INTRODUCTION

This will remove the protective front screen so that all the speakers and wires will be accessible for removal.

## Step 1 — Screen

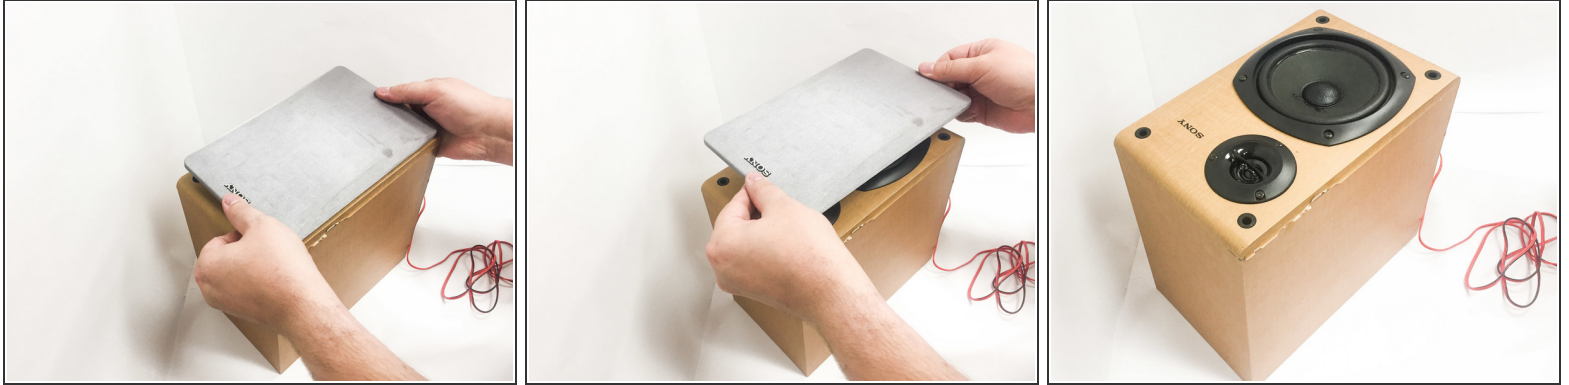

- Pull screen cover from the edges for removal. This will not require much effort.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 07:45:24 AM.